

TWO-BURNER GAS STOVE

Filling the Tank

1. Always fill outdoors. Never fill tank, loosen cap or remove fuel cap while tank is on or attached to stove, near flame, or other ignition sources.
2. Close FUEL VALVE firmly
3. Close PUMP KNOB firmly
4. Place tank on level surface resting at angle
5. Remove FUEL CAP. Use funnel and fill with fresh fuel.
6. Replace FUEL CAP on tank and on fuel container. Tighten firmly and wipe up spilled fuel and dispose.

Pumping the Fuel

1. Be sure the FUEL VALVE is OFF and FUEL CAP is firmly closed.
2. Open PUMP KNOB one turn COUNTER CLOCKWISE. Place thumb over hole in pump knob and pump approximately 30 full strokes.
3. Close PUMP KNOB CLOCKWISE.

Installing Tank

1. Insert generator into large hole on front of stove and into mixing chamber above burner. Engage tank clips into slots on front of stove.
2. Swing wind baffles out and insert the wire clips into slots in ends of stove.

Lighting Main Burner

1. Close AUXILIARY VALVE. Turn LIGHTING LEVER to up position.
2. STANDARD VERSION STOVE: Hold a lit match at main burner before opening the fuel valve. Open fuel valve quickly, at least TWO full turns.

Lighting Auxiliary Burner

1. After MAIN BURNER has been lit, AUXILIARY BURNERS may be lit.
2. STANDARD VERSION STOVE: Hold lit match at edge of AUXILIARY BURNER and OPEN the AUXILIARY VALVE.

Turning Off Stove

1. Shut off AUXILIARY BURNER and MAIN BURNER by closing AUXILIARY VALVE.
2. Close FUEL VALVE firmly.
3. NOTE: Flame will linger on MAIN BURNER for a few minutes after fuel valve is closed.

Packing Stove

1. The tank fits in the left end of the stove with valve wheel fitted under rear lip of case.

SINGLE BURNER STOVE

Filling the Tank

1. Extend feet and place stove on a smooth, level surface.
2. Move the RED FUEL LEVER to the OFF position.
3. Close PUMP KNOB firmly. Turn in direction of arrow on PUMP KNOB.
4. Remove FUEL CAP. Use funnel and fill with fresh fuel.
5. Replace FUEL CAP on stove and on fuel container. Tighten firmly. Move fuel container away from stove.

To Pump

1. Make sure RED FUEL LEVER is in the OFF position.
2. Open PUMP KNOB one turn.
3. With thumb over hole in PUMP KNOB, pump approximately 25 full strokes.
4. Close PUMP KNOB firmly.

To Light

1. Place on stove on a smooth, LEVEL surface.
2. Hold lighted match at BURNER and turn RED FUEL LEVER to HIGH/LIGHT.
3. As soon as burner lights, open PUMP KNOB one turn and PUMP for 30 PUMPS.
4. Close PUMP KNOB.

CAUTION:

If fuel or flames appear below burner, IMMEDIATELY turn RED FUEL LEVER OFF. Allow stove to cool. Turn stove upside down to empty any fuel that accumulated in the burner. Wipe dry. Carefully review instructions before relighting stove.

To Turn Off

1. Move RED FUEL LEVER from OFF to HIGH several times.
2. Latch RED LEVER in OFF position.
3. Flame will linger on burner for 1-2 minutes after lever is OFF.

